INSTALLATION INSTRUCTIONS
BUILT-IN RECTANGULAR FOOD WARMERS
MODELS HSW-6 (D)

ELECTRICAL

MODEL	VOLTS	WATTS	AMPS	PHASE	FIELD WIRING GAUGE	TEMP. RATING
HSW-6	120	825	6.9	SINGLE	14 AWB Cu	90°C
HSW-6D	120	825	6.9	SINGLE	14 AWB Cu	90°C

INCHES
(MM)

CUTOUT DETAILS

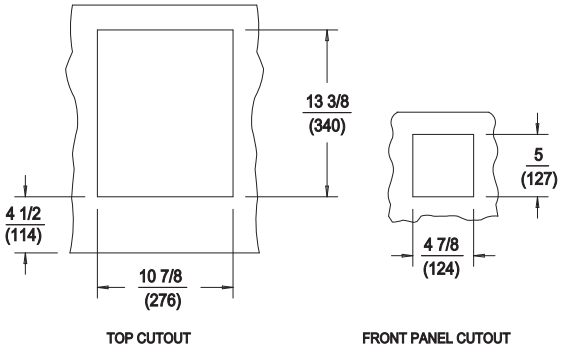

TOP CUTOUT

FRONT PANEL CUTOUT

PRODUCT DIMENSIONS

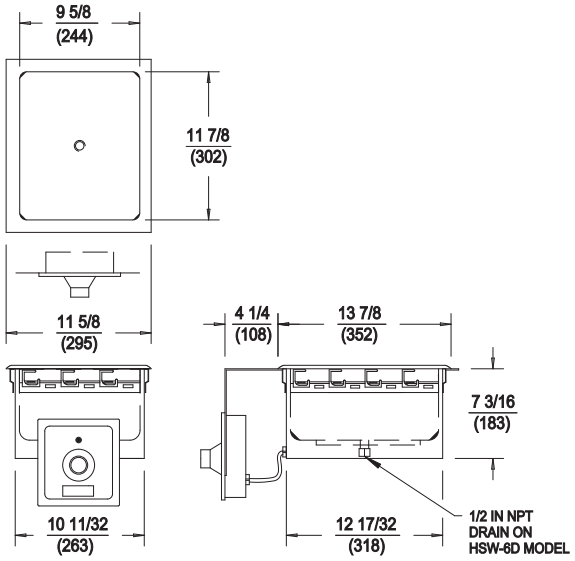

CLEARANCES

MINIMUM CLEARANCE REQUIRED FROM UNIT TO THE NEAREST SURFACE			
BACK	SIDE	BOTTOM	FRONT
1 (25)	2 (51)	6 3/4 (171)	4 1/2 (114)

INSTALLATION INSTRUCTIONS

INSTALLER MUST MEET CONDITIONS OF ACCEPTABILITY OUTLINED BELOW UPON INSTALLATION:

1. Required installation clearances:
Wooden and Metal Installation: DO NOT install closer than 4 1/2 inches to front wall, 1 inch to back, 2 inches to side wall, and 6 3/4 inches to surface below the unit.
2. Unit shall be accessible for servicing from the bottom.
3. If storage is to be used underneath the unit, it is recommended that a baffle be placed 8 1/2 inches below the unit to avoid contact with elevated temperatures.

TO FABRICATE:

1. Layout cutout dimensions on countertop and front apron, shown in cutout details above.
2. Cut and/or drill holes as required in countertop and apron.
3. Must be accessible for servicing from the bottom.

TO INSTALL:

IMPORTANT - DO NOT disconnect lead wires from the Master Control Panel when making installation.

1. Locate warmer and control over the counter cutout. Pass the control box through the opening, then mount the control box to the rear of the apron.
2. Apply a bead of silicone adhesive/sealant to the gasket on the underside of the warmer flange, then seat warmer onto the countertop. Properly position.
3. From underneath, insert screwdriver into "slots" on the wellslok frame and twist "ears" outward to secure flange tightly to countertop (see detail).
4. Mount control box to apron cutout as shown in drawing.
5. Mount control panel onto electrical box using the screws supplied.

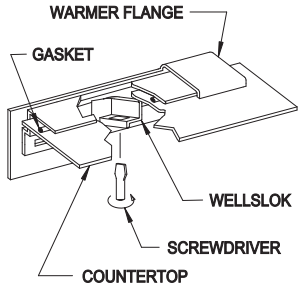

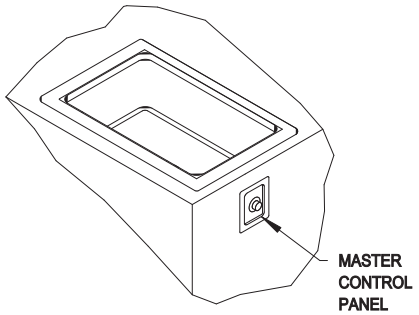

IMPORTANT:
MOUNT APPLIANCE SO THAT THE CONTROL PANEL IS LOCATED TO THE FRONT OF THE FIXTURE.